

Installation Instructions

Determine a location, in compliance with local codes, on or near the HVAC air handler and within 6 feet of a standard power source for the HALO Connect installation location. Attach to the mounting location using the (4) #6 x ¾" screws (provided). The HALO Connect can also be mounted using the provided magnets or self-adhesive strips, however screw connections are preferred to ensure compliance with all regulatory requirements. If using the self-adhesive strips, first clean the surface and make sure it is free of oils and waxes (De-natured alcohol or similar mild solvent can be used). Peel the backing of the three self-adhesive strips and adhere to the mounting location.

Install BLU QR® UV-C lights, REME HALO® or HALO LED® (with air switch) into the air conditioning system per each devices installation manuals. Connect BLU QR®, REME HALO® or HALO LED® power cords to HALO Connect™ per connection labels. For the HALO LED® also connect the Air Switch to HALO Connect™.


Use toggle switches to select the appropriate models. Connect HALO Connect™ Power Cord to the wall outlet to power the module. Confirm indicator lights illuminate and that RGF devices are functional.

HALO Connect features Countdown Day Timers as a visual indication of Cell and UV lamp life. When a Countdown Day Timer reaches zero, the Cell or UV Lamp requires replacement. After changing the Cell or UV Lamp press the 'Reset' button to reset the days remaining. The tip of a pen, or a paperclip can be used to push the reset button(s)



Indoor Air Quality Power Module

Installation and Operation Instructions

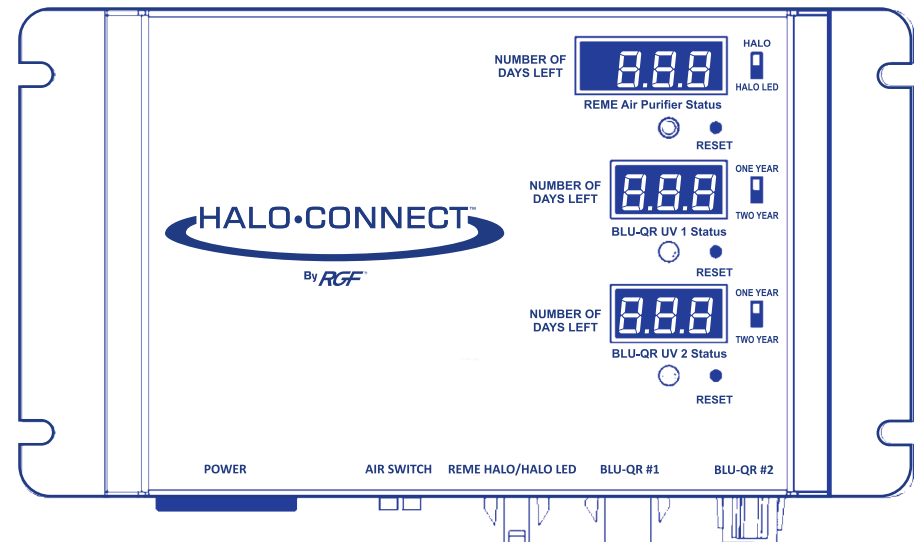

These installation instructions are available digitally at www.rgf.com

RGF Environmental Group Inc.

1101 W. 13th St, Riviera Beach FL 33404

www.rgf.com / 561.848.1826

Thank you for purchasing HALO Connect, a power module designed to streamline installation of RGF Indoor Air Quality (IAQ) devices in your air conditioning system. Once installed, HALO Connect™ provides a central control center and power source for all connected RGF whole home air purification devices.

HALO Connect offers power connections for a REME HALO® or HALO LED™ along with two (2) additional BLU QR® coil sanitizing UV-C lights. Each connected device is monitored with a Countdown Day Timer providing visual indication of days remaining before recommended Cell or Lamp replacement.

Package Contents: Series I LUCIDIUM®

- One (1) HALO Connect Power Module
- One (1) HALO Connect Power Cord
- Two (2) LUCIDIUM® BLU QR® Units
- Two (2) LUCIDIUM® BLU QR® Power Cords
- One (1) Set of Mounting Hardware

Package Contents: Series II REME HALO® Zero


- One (1) HALO Connect Power Module
- One (1) HALO Connect Power Cord
- One (1) REME HALO® Unit
- One (1) REME HALO® Power Cord
- Two (2) LUCIDIUM® BLU QR® Units
- Two (2) LUCIDIUM® BLU QR® Power Cords
- One (1) Set of Mounting Hardware

Package Contents: Series II HALO LED™

- One (1) HALO Connect Power Module
- One (1) HALO Connect Power Cord
- One (1) HALO LED® Unit
- One (1) HALO LED® Power Cord
- Two (2) LUCIDIUM® BLU QR® Units
- Two (2) LUCIDIUM® BLU QR® Power Cords
- One (1) Set of Mounting Hardware
- One (1) HALO LED® Air Switch

Electrical Requirements:

100-250VAC/50-60hz, 65 watts

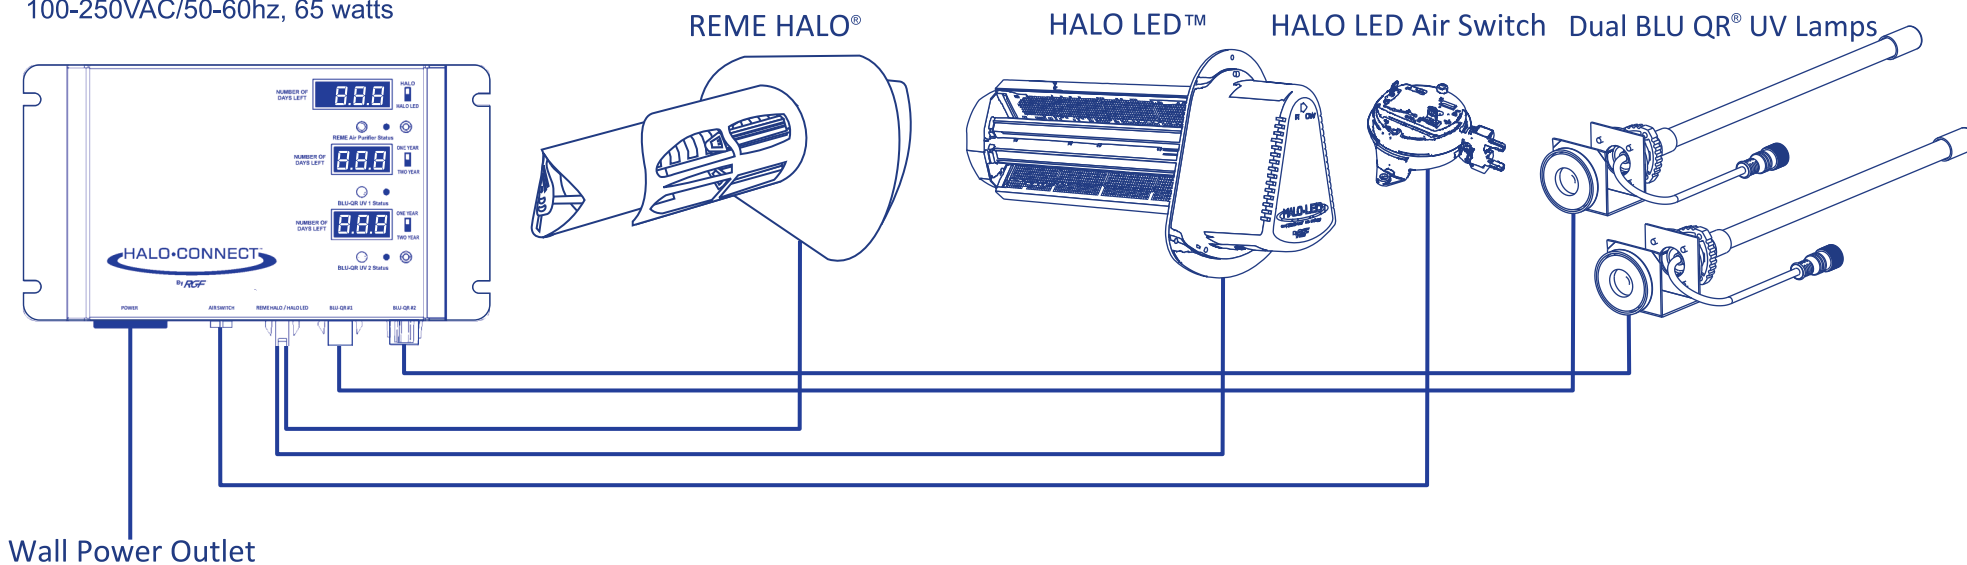

HALO Connect Warranty Information

HALO Connect by RGF® is warrantied to be free from defects in material and assembly for a period of two (2) years) from the time of purchase. See individual product warranty for devices connecting to HALO Connect.

This warranty does not cover parts damaged by decomposition from chemical action or wear caused by abrasive materials, nor does it cover damage resulting from misuse, abuse, or from improper operation, maintenance, installation or modifications.

For Warranty Claims visit or to find these instructions online, visit www.rgf.com